

Browser Exercises - I


Alignments and Comparative genomics

1. Navigating to the Genome Browser (GBrowse)


Note: For this exercise use <http://www.tritrypdb.org>

a. Navigate to the Genome Browser (GBrowse) from the TriTrypDB home page.

- Go to GBrowse from the TriTrypDB home page. You can use the Tools section on the homepage or the grey toolbar in the header section. Explore the browser – take note of the different sections: Search, Overview, Region, Details, Select Tracks, etc...

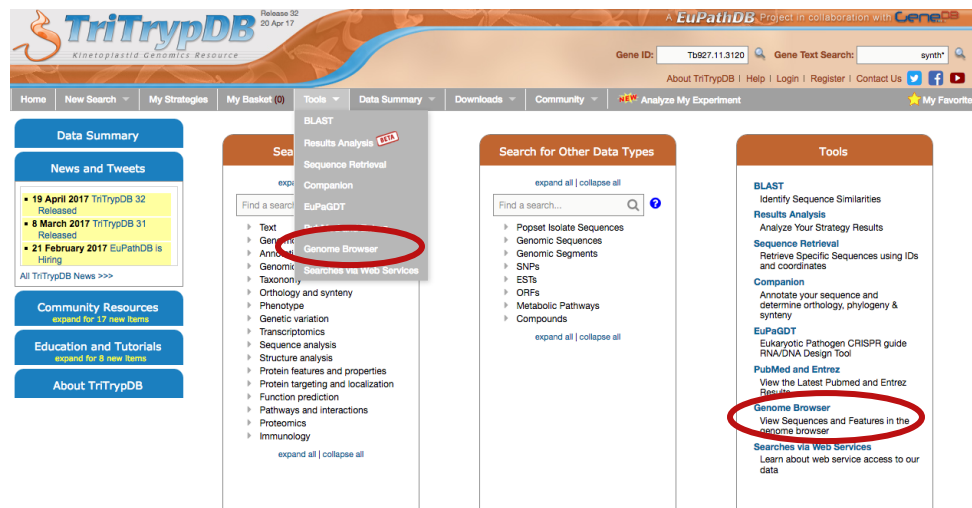


Note: It is also possible to navigate to the Genome Browser from a gene page by clicking the 'View in Genome Browser' link. But let's use the home page link for now.

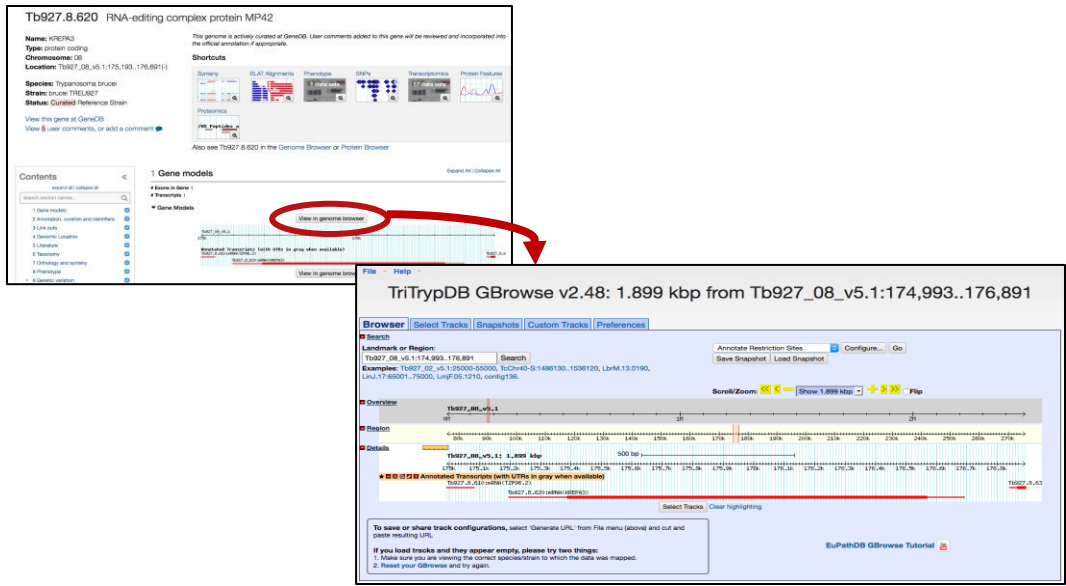


b. Explore a genomic sequence and the annotation track in GBrowse.


- Look at the “Landmark or Region” box. What information does the “Landmark or Region” box contain? The Landmark or Region box should read – Tb927_08_v5.1:174,993..176,891.
- What chromosome is displayed?
- What location of the chromosome is displayed?

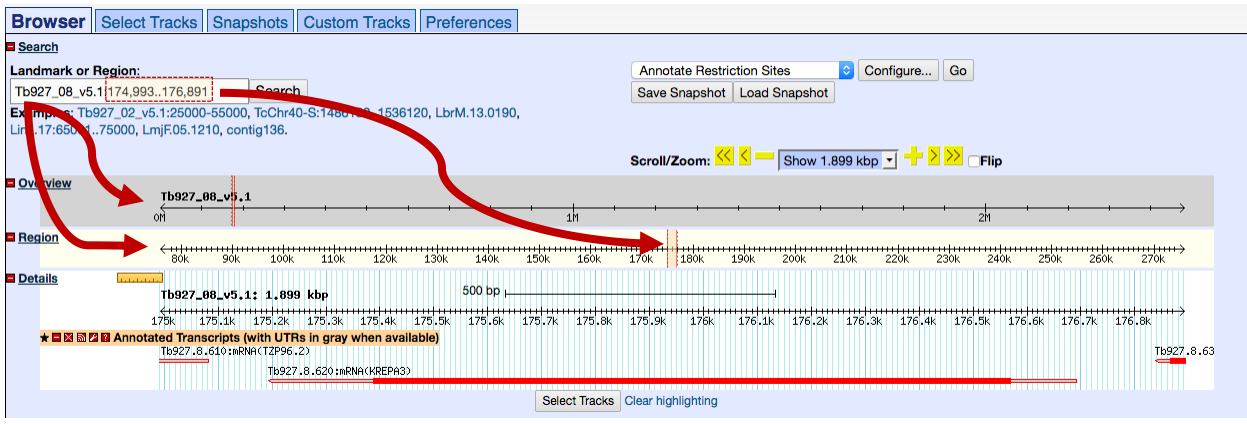


- Move to a different genomic region on this chromosome. For example, visit the right arm of this chromosome.
 - Hint: change the coordinate numbers in the “landmark or region” box to correspond to an area in that region. Look at the overview to give you an indication of the total size of this chromosome, ie. 1000000..1100000).
 - **OR** highlight the area representing approx. 1000000-1100000 on the scale in the Overview section and then choose zoom from the popup.

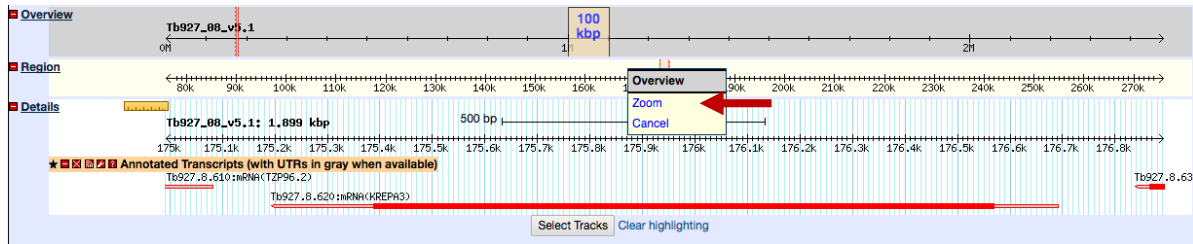


- Move to chromosome 9. How did you do this?
 - Hint: Change the chromosome number in the “landmark or region” box. It should look like this: Tb927_09_v5.1:1,000,000..1,100,000. The Tb927_09_v5.1 portion is the genomic sequence ID for chromosome 9.
- Zoom in to a 20Kb region. Select 20Kb from the Scroll/zoom drop down menu.

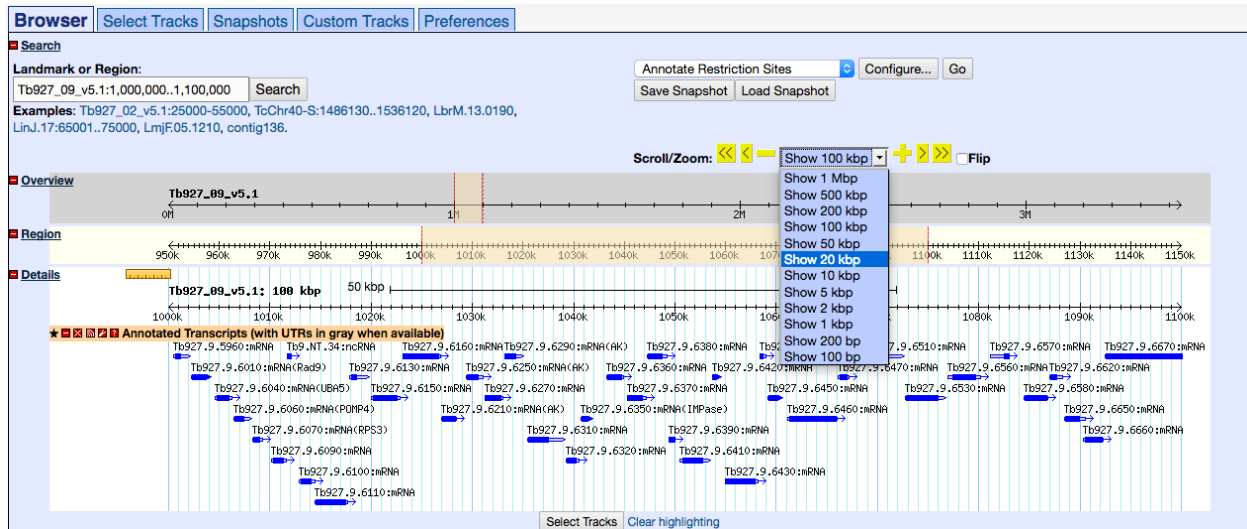

- What genes are in this region? Mouse over the gene graphics and look at the popups.
- Explore the ruler tool. Click on the ruler to engage then drag it across the window. The ruler tool displays the nucleotide coordinates of the ruler’s solid center line. This is very useful for comparing between the annotation data track and others that we will add later.

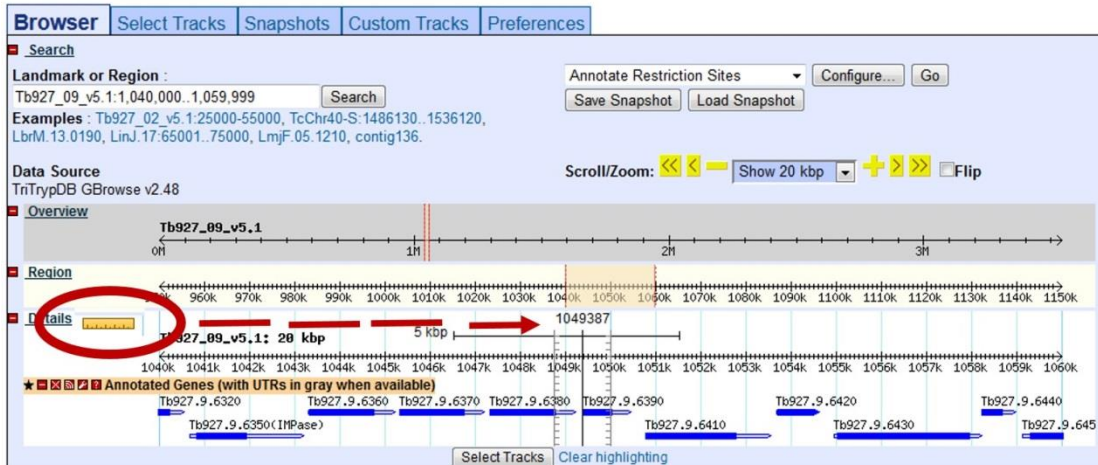

- There are other ways to move and zoom. Try highlighting an area along the scale in the overview, region or details sections of GBrowse.

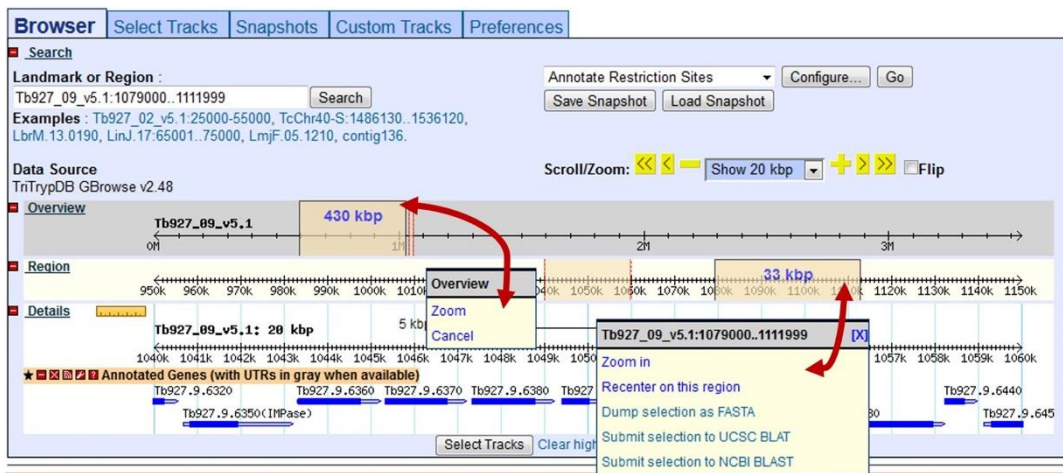

- What if you want to go to a specific gene in Gbrowse? Try to figure out how to go to this gene: Tb927.2.5800
- Type the ID in the "landmark or region" box. The landmark box has a search function that supports gene IDs. What else does it support?
- What is this gene?

2. Exploring data tracks in GBrowse

- Is the region containing the sedoheptulose-1,7-bisphosphatase (SBPase) gene syntenic in all kinetoplastids?
- Go to the "Select Tracks" tab and turn on the track called "Syntenic Sequences and Genes". The browser is automatically updated with tracks you select. Note that this track contains multiple subtracks.



- Return to the browser by clicking the “Browser” tab and **zoom out to 20Kb**.
- What does the synteny track in this region look like?
- Does SBPase appear to have orthologs in *Leishmania*? *Leptomonas*? *Crithidia*?
- What direction is the SBPase gene relative to the chromosome?
- What genes are upstream and downstream of the SBPase?
- Modify the subtracks to remove all species apart from *Trypanosoma* from the view. Click on the link ‘showing 72 of 72 subtracks’, wait for the popup select *Trypanosoma* from the genus drop-down menu. **Click Change to reconfigure the track.**
- Examine the gene corresponding to the *T. vivax* SBPase in the synteny track. Hover the

Overview

Tb927_02_v5.1

Region

950k 960k 970k 980k 990k 1000k 1010k 1020k 1030k 1040k 1050k 1060k 1070k 1080k 1090k 1100k 1110k 1120k 1130k 1140k

Details

Tb927_02_v5.1: 20 kbp

5 kbp

1037k 1038k 1039k 1040k 1041k 1042k 1043k 1044k 1045k 1046k 1047k 1048k 1049k 1050k 1051k 1052k 1053k 1054k 1055k 1056k

★ Syntenic Sequences and Genes (Shaded by Orthology) (Showing 72 of 72 subtracks)

bayaB06-376 contig

bayaB06-376 genes

ctasCfCl contig

ctasCfCl genes

emonLV88 contig

emonLV88 genes

laetL147 contig

laetL147 genes

braMHOMBR75M2903 contig

braMHOMBR75M2903 genes

braMHOMBR75M2904 contig

braMHOMBR75M2904 genes

donBPK282A1 contig

1391k 1392k 1393k 1394k 1395k 1396k 1397k 1398k 1399k 1400k

Select the tracks you wish to display. Sort the tracks by clicking on the column headings, or by clicking and dragging rows

Syntenic Sequences and Genes (Shaded by Orthology) Subtracks

Select	Kingdom	Class	Phylum	Genus	Species	Organism
All off	All	All	All	All	All	All
<input checked="" type="checkbox"/>	N/A	N/A	N/A	Crithidia	Crithidia fasciculata	Crithidia fasciculata
<input checked="" type="checkbox"/>	N/A	N/A	N/A	Endotrypanum	Endotrypanum monterogelii	Endotrypanum monterogelii
<input checked="" type="checkbox"/>	N/A	N/A	N/A	Leishmania	Leishmania aethiopia	Leishmania aethiopia
<input checked="" type="checkbox"/>	N/A	N/A	N/A	Leishmania	Leishmania braziliensis	Leishmania braziliensis
<input checked="" type="checkbox"/>	N/A	N/A	N/A	Leishmania	Leishmania infantum	Leishmania infantum
<input checked="" type="checkbox"/>	N/A	N/A	N/A	Leishmania	Leishmania major	Leishmania major
<input checked="" type="checkbox"/>	N/A	N/A	N/A	Leishmania	Leishmania enriettii	Leishmania enriettii

Select the genus *Trypanosoma* then click on Change at the bottom of the popup


gene image to find the gene popup. Why is it a

What could be some possible reasons for this?


- One thing that can help inform you about the “completeness” of a genome assembly is the assembly track and view the *T. vivax* gene in GBrowse – you can follow these steps:

name in the fragment?

- Hover over the *T. vivax* SBPase gene in the synteny track.
- From the popup select GBrowse

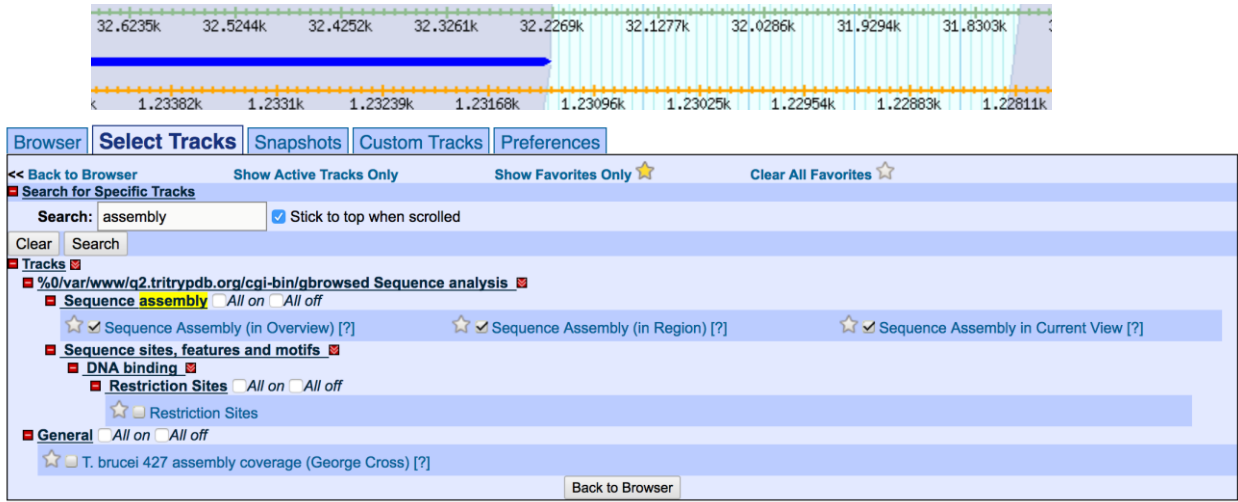


- Next go to the select tracks section and turn on the assembly tracks. You can find them easily by using the search function in the select tracks section. Search for the work assembly.
- When you go back to the browser section you can arrange the gene track so you can see exactly where the gaps are.

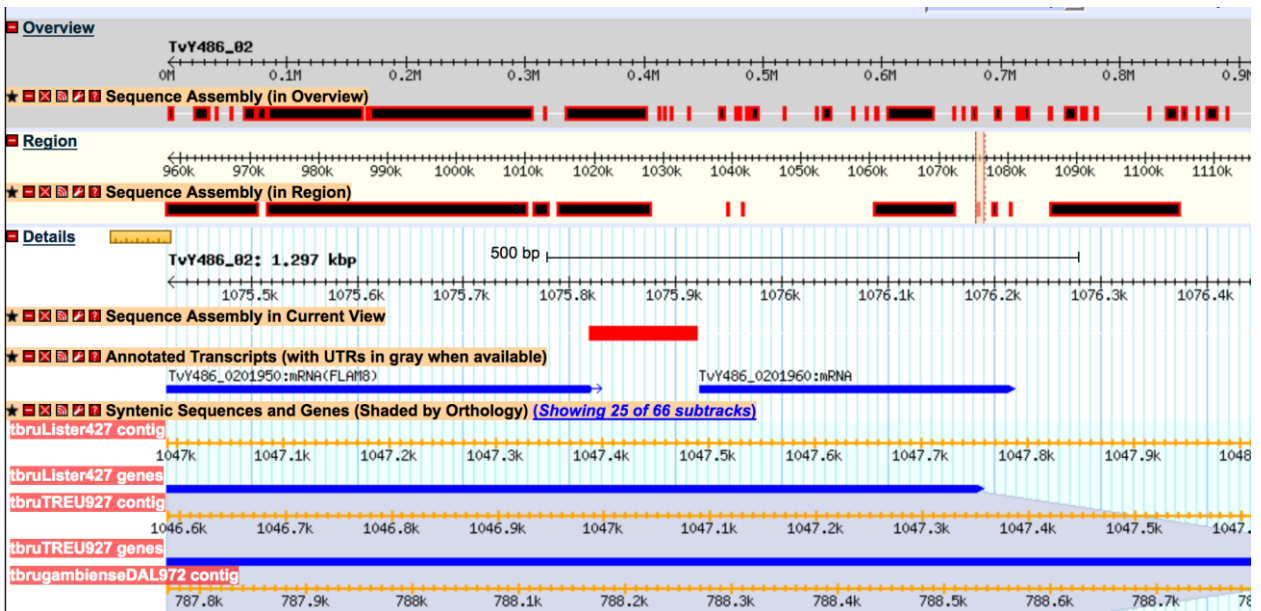

- Zoom out to 50KB. Look at the genomic sequence for *T. congolense* – why does the synteny look like it does?
- Zoom out to 500KB – what could you conclude about this region in *T. congolense*? (See image if needed).

- You will also notice that some of the genomes have contigs that are not contiguous. Why is that?
- Mouse over the two contigs and look at the information in the popups – do these pieces belong to the same chromosome? What does this mean?

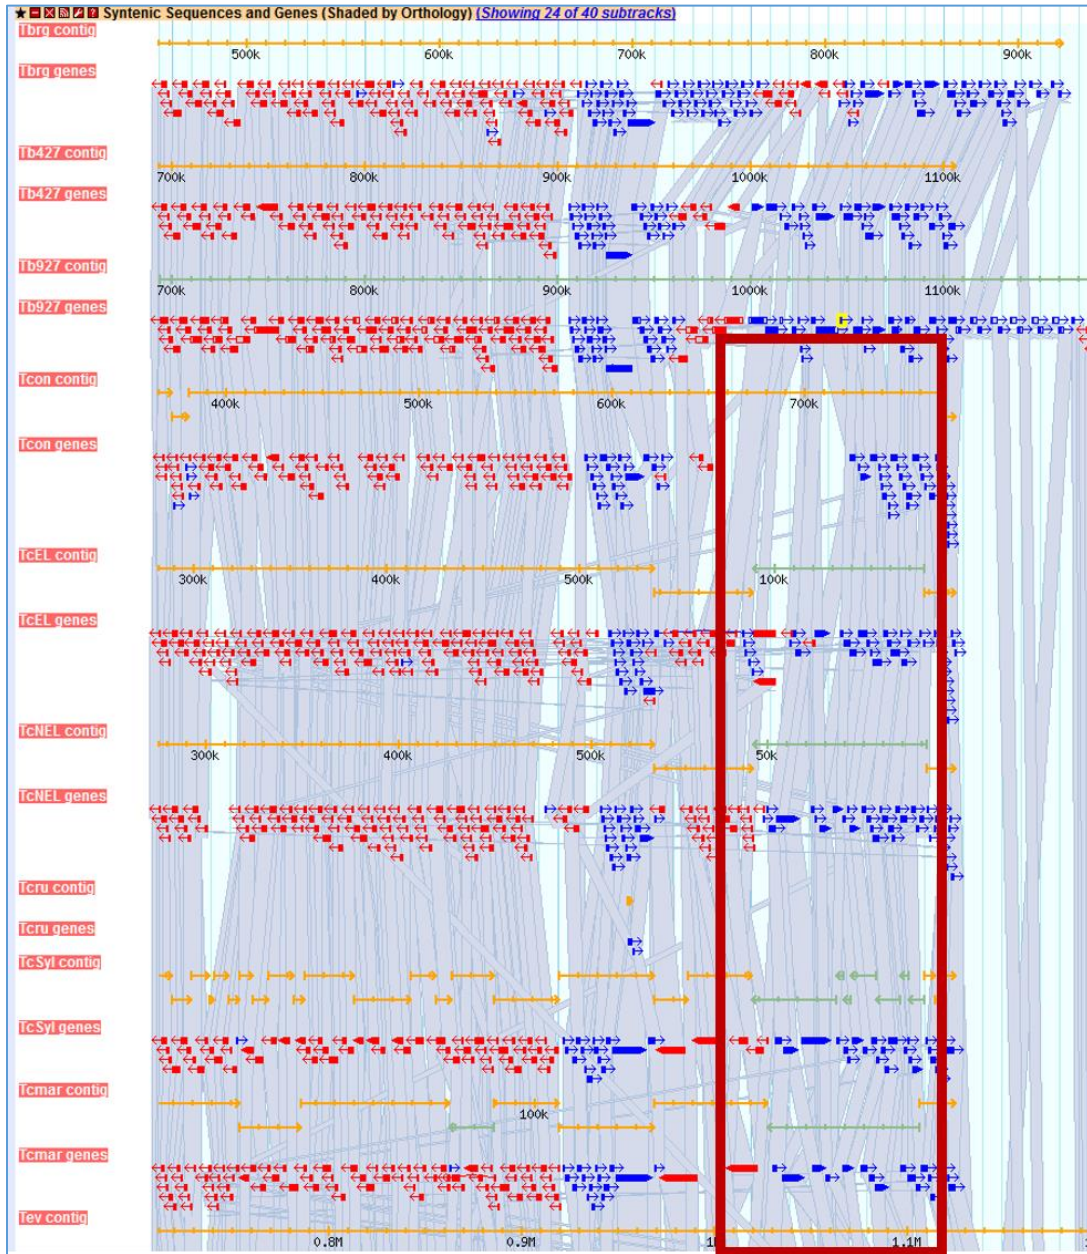

b. Exploring other data tracks in Gbrowse.

In this example we are viewing *T. brucei* SBPase, so the data tracks you turn on will display data only if the data is aligned to the *T. brucei* genome.

Turn on the ChIP-seq coverage plots and turn off the syntenic gene and region tracks.


The data track is called: ChIP-Seq - Four histone Variants ChIP-Seq Coverage aligned to T

brucei TREU927 (Cross) (linear plot). For this experiment, chromatin was immunoprecipitated using several different histone antibodies. The DNA that precipitated with the histone was sequenced and aligned to the T. brucei TREU927

5 Epigenomics
 CHIP Seq
 T. brucei brucei TREU927 All on All off
 ChIP-Seq - Four histone Variants ChIP-Seq Coverage aligned to T. brucei brucei TREU927 (Cross) (linear plot) [\[showing 8/8 subtracks\]](#)
 ChIP chip
 6 Transcriptomics
 7 Sequence analysis
 8 Proteomics
 User Contributed Tracks All on All off

genome. Peaks in the sequence coverage plots represent areas of histone binding and transcription start sites. <http://www.ncbi.nlm.nih.gov/pubmed/19369410>


- What does this data show you?
- Roughly how many polycistronic units does this chromosome have? Zoom out to the entire chromosome.
- Do the ChIP-seq peaks correlate with the direction of gene transcription (blue vs. red)?

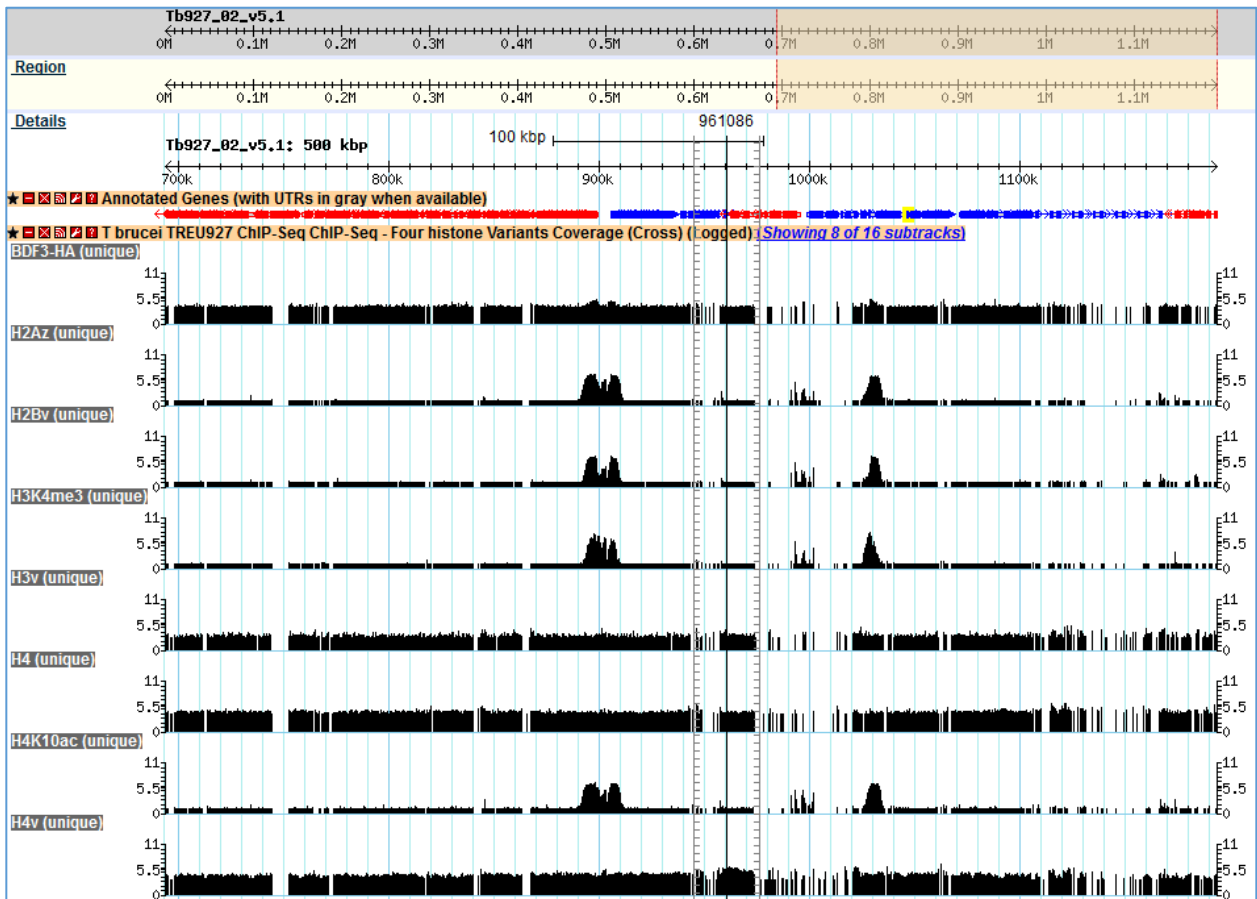


- Now zoom back to 50Kb. Turn off the ChIP-Seq tracks and turn on the RNASeq Coverage track called: **Bloodstream and Procyclic Form Transcriptomes mRNAseq Coverage aligned to T brucei TREU927 (Siegel et al.) (log plot)(4 subtracks)**. To show all four subtracks for

this dataset, use the subtrack configuration tool accessed through the 'Showing 2 of 4 subtracks' link that appears after the track title.

- Move to the **region around 0.6Mbs of the chromosome** (you should be on chromosome 2) and turn on all four subtracks. Take note of the black and grey bars in the coverage plots. What do you think the grey bars indicate?

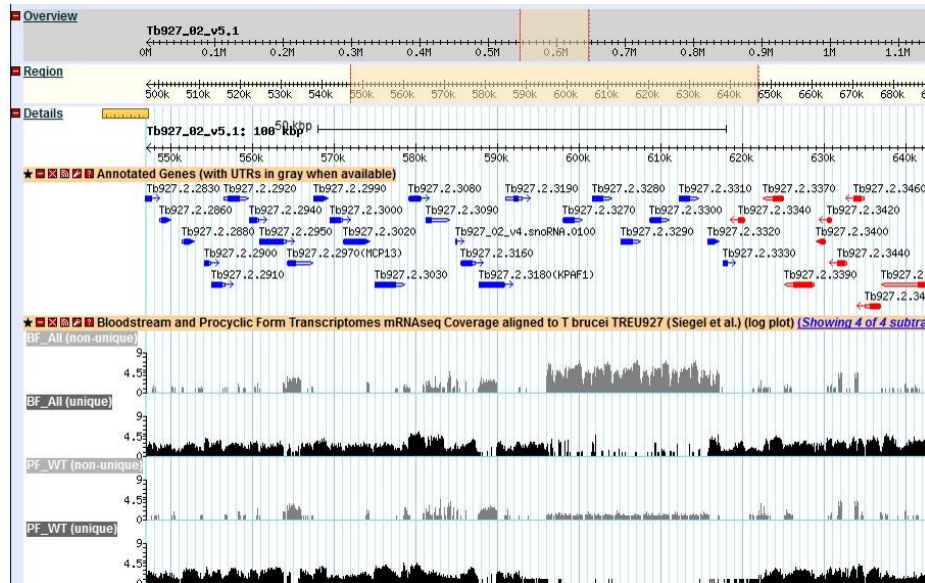

- Now zoom out to 100Kb – do you see a difference between the blood forms and procyclics?
- Zoom in to a gene that looks like it is differentially expressed. What are your conclusions? Are the reads supported by unique or non-unique reads?

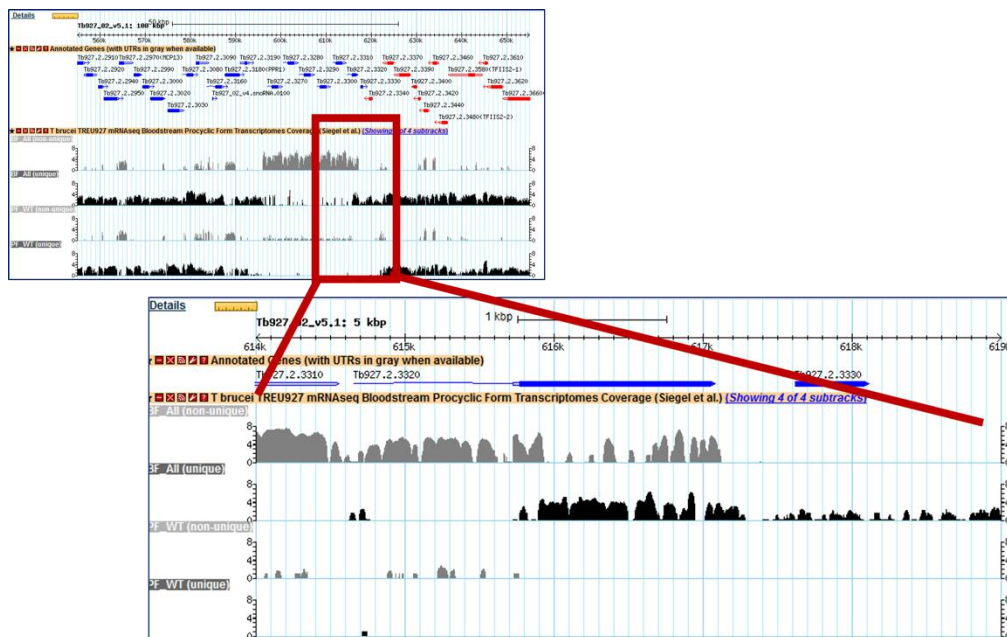


- Can you turn on additional tracks that may give some more support to your conclusions?
Hint: turn on the EST and *T. brucei* protein expression evidence tracks.
 - Is there any proteomics evidence for this region?
 - How about EST evidence? Click on an EST graphic (glyph) to get additional information.
- Turn off the RNA-seq graphs and make sure the *T. brucei* protein expression evidence tracks are on. **Zoom out to 500Kb**. Explore the evidence for gene expression based on mapped peptides from proteomics experiments – which gene in this view has the highest number of peptide hits?



3. Downloading data from GBrowse and uploading your own tracks to GBrowse

You can download data from GBrowse in multiple ways and formats.

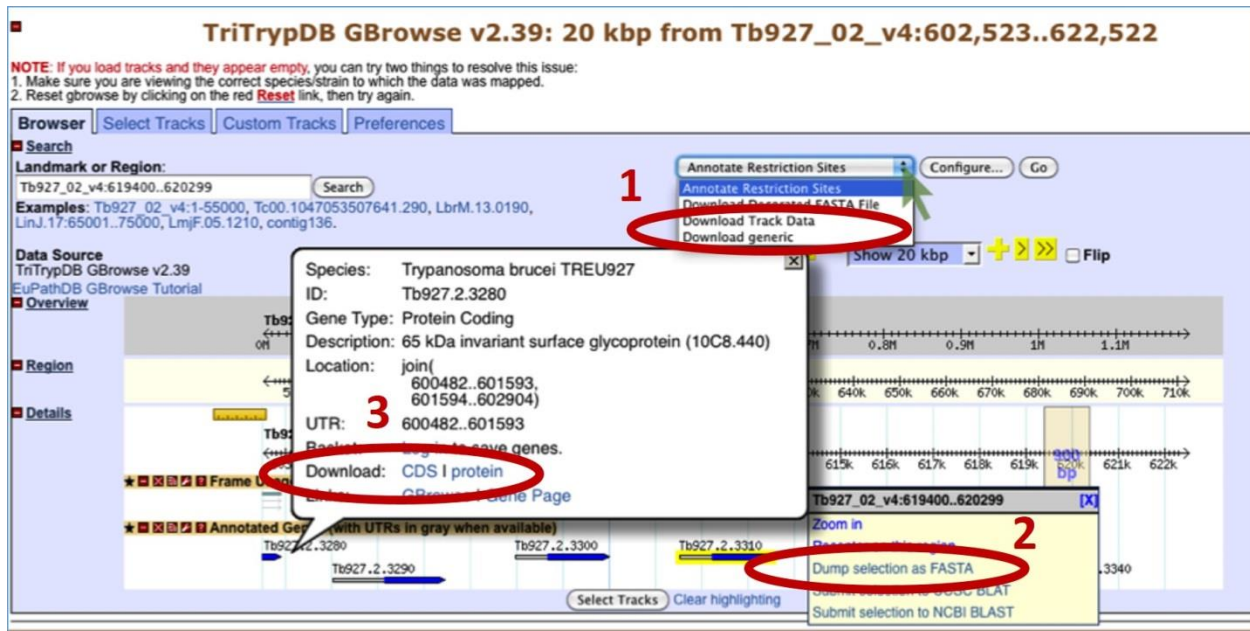


1. The Report and Analysis drop down menu allows you to select a format for the download file that will contain all the features that you have displayed in the region you are viewing.
2. Highlighting a section of the Details scale allows you to retrieve a FASTA dump of the nucleotide sequence from this region. You can also use this same tool to submit a sequence to NCBI Blast.
3. Mousing over a gene will reveal a popup window with the option to get the coding (CDS) or amino acid sequence of that gene.


- **Uploading your own tracks is also possible.** One reason to upload your own tracks is to display your own data on a chromosome or genomic segment and view it in the context of gene models and other data. To do this you have to follow some rules to ensure that the file you are uploading can be understood by GBrowse. In this exercise we will only go through a couple of simple examples to give you an idea of the possibilities. There are many online resources if you wish.
- Imagine that you have cloned a new gene and you would like to display it in GBrowse. Click on the "Custom Tracks" GBrowse tab and add a custom track "From text".

There are many types of formats that can be used. For this example we are going to tell GBrowse that we have a gene and a few things about the gene, like its location. Paste the following into the editor (the next window after you click on Add Custom Tracks From Text), and then click on upload (hint: sometimes you have to zoom in or out a little to see your new glyph):

Gene "Super Gene" Tb927_02_v5.1:600800..639999

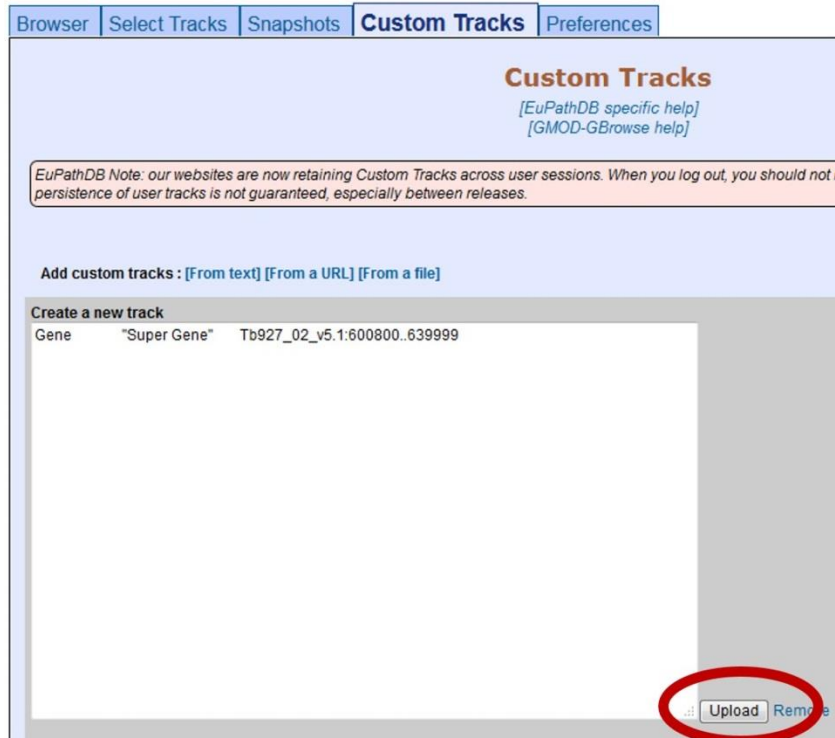

You should see a new track with your gene displayed.

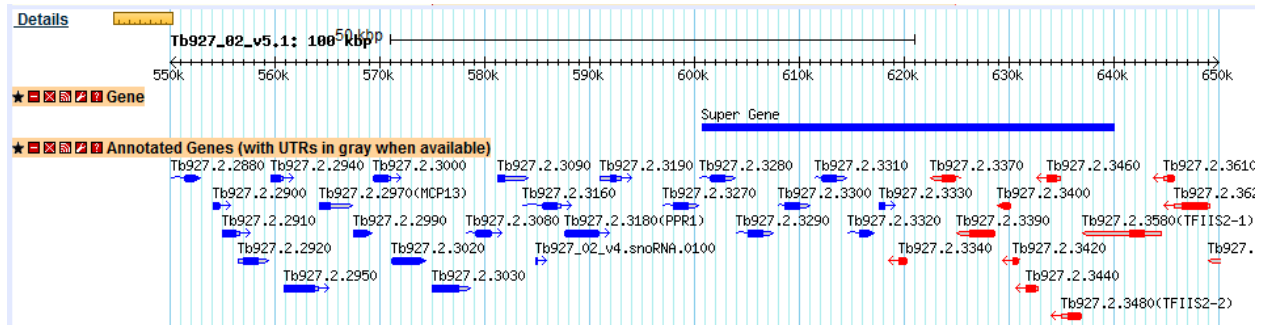

- Now let us load a more complex graphic, a bigwig file of some RNA Sequencing data. For this we posted the file to a public site and are using the URL to inform GBrowse of the file location. Choose 'From a URL' in the 'Add custom tracks' field. Then enter the following and click Import:

http://luffa.gacrc.uga.edu/swfeltz/bigwig/TREU927_Cross_RNASeq.bw

Browser Select Tracks Snapshots **Custom Tracks** Preferences

Custom Tracks


[EuPathDB specific help]
[GMOD-GBrowse help]

EuPathDB Note: our websites are now retaining Custom Tracks across user sessions. When you log out, you should not need to upload y persistence of user tracks is not guaranteed, especially between releases.

There are no tracks yet.

Add custom tracks : [From text] [From a URL] [From a file] **Attention: the URL should not be a https (SSL) one.**

Fetch track file from this URL

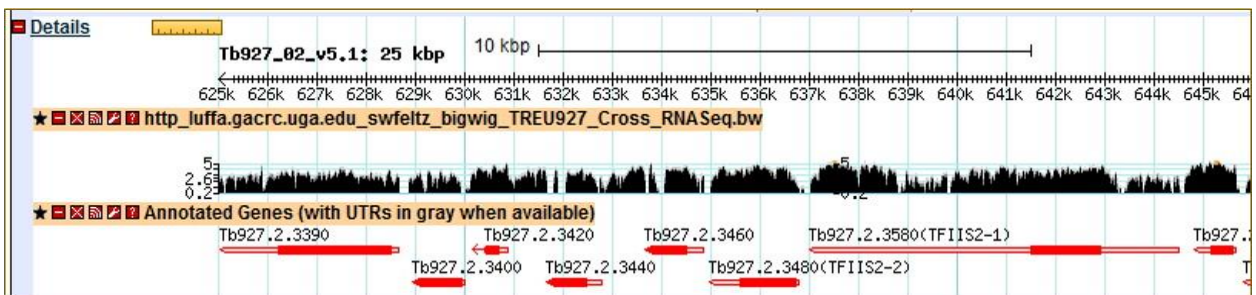

4. Designing PCR Primers with GBrowse

Open GBrowse at the genomic location for your new primers.

- Go to gene page of a gene you want to design primers for and use the 'View in GBrowse' button. This example is using SBPase, Tb927.2.5800 and we have zoomed out to 20K.
- OR open GBrowse from the home page and then enter genomic coordinates of your region in the landmark region.

Choose "Design PCR Primers" from the drop down menu and then **click GO**.

- This opens the Design Primers application.

Browser | Select Tracks | Snapshots | Custom Tracks | Preferences

Search
 Landmark or Region : Tb927_02_v5.1:1,037,013..1,057,012 Search
 Examples : Tb927_02_v5.1:25000-55000, TcChr40-S:1486130..1536120, LbrIM.13.0190, LinJ.17:65001..75000, LmjF_05.1210, contig136.

Data Source: TnTrypDB GBrowse v2.48

ScrollZoom: << < < Show 20 kbp > > > > Flip

Overview
 Tb927_02_v5.1
 0H 0.1H 0.2H 0.3H 0.4H 0.5H 0.6H 0.7H 0.8H 0.9H 1H 1.1H

Region
 950k 960k 970k 980k 990k 1000k 1010k 1020k 1030k 1040k 1050k 1060k 1070k 1080k 1090k 1100k 1110k 1120k 1130k 1140k

Details
 Tb927_02_v5.1: 20 kbp
 5 kbp
 1038k 1039k 1040k 1041k 1042k 1043k 1044k 1045k 1046k 1047k 1048k 1049k 1050k 1051k 1052k 1053k 1054k 1055k 1056k 1057k

★ Annotated Genes (with UTRs in gray when available)
 Tb927.2.5760 Tb927.2.5800(SBPase) Tb927.2.5810 Tb927.2.5820

Choose a target:

- The graphic is interactive. To choose a target, highlight an area on the scale. You can zoom in with the controls in the upper left corner. The PCR primers that you design with this application will flank the shaded region.
- Once you choose a target, the Product size range is automatically updated in the parameter table at the bottom of the page.
- You can choose to customize the primer design using other parameters.

Click DESIGN PRIMERS to run the application.

Showing 20 kbp from Tb927_02_v5.1, positions 1037013 to 1057012

Tb927_02_v5.1: 20 kbp
 1038k 1039k 1040k 1041k 1042k 1043k 1044k 1045k 1046k 1047k 1048k 1049k 1050k 1051k 1052k 1053k 1054k 1055k 1056k 1057k

★ Annotated Genes (with UTRs in gray when available)
 Tb927.2.5760 Tb927.2.5800(SBPase) Tb927.2.5810 Tb927.2.5820

★ http_loquat.rcc.uga.edu_swfetz_bigwig_TREU927_Cross_RNASeq.bw

Targeting information

- PCR primers will flank the shaded region.
- Click on a different sequence feature to change the selection
- The boundaries of the shaded target region can be adjusted by clicking on the lower scalebar
- The size of potential PCR products can be adjusted via the 'Product size range' option below

Primer Size	Min. 18	Opt. 20	Max. 27	Pair Max Mismatching:	24.00
Primer GC%	Min. 20.0	Opt.	Max. 80.0	Max 3' Stability:	9.0
Product size range:	1050-1350			Max Self Complementarity:	8.00
Primer Self:				Max 3' Self Complementarity:	3.00
				Max Poly-X:	5

Design Primers | Reset Parameters | Return to Browser